

## Installing DrMetaza2 Software

This is a guide to setting up your MPX-70 to obtain the best possible results.

\*Please read all of the included Operation Manuals before following our guides, and ensure you use the equipment in accordance with the manufacturer's requirements.

### STEP.1

DO NOT CONNECT MPX-70  
Follow these instructions before connecting the machine.



Insert DrMetaza2 disc and click on 'Install' DrMetaza2 then follow instructions.


Click on 'Install' MPX-70 Head Manager then follow instructions.

Now connect the MPX-70 with the USB cable & turn on the

### STEP.2

Your computer should now detect the new hardware.


Click on next.

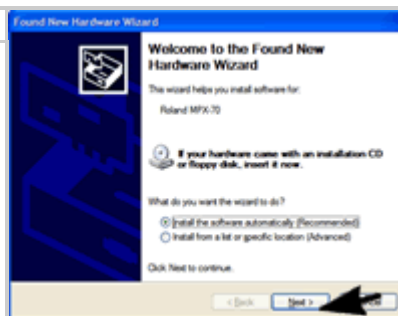

### STEP.3

When this screen appears, click on 'Continue Anyway'

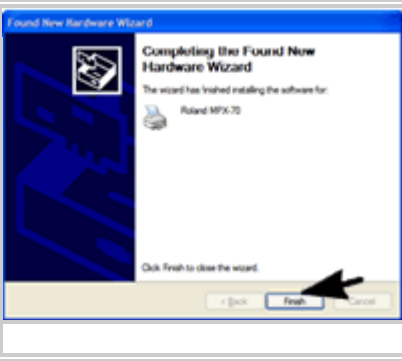

<p><b>STEP.4</b></p> <p>Click on 'Finish' to complete the installation.</p>	
<p><b>STEP.5</b></p> <p>Close this window down.</p> <p>Software is now installed.</p>	